

# ASSEMBLY INSTRUCTION VIDEO SKU: VT6, VT7

# VIEW ON SMARTPHONE





1. Open Camera app


2. Postion camera to the QR code



3. Click on the pop-up link

VIEW ON COMPUTER



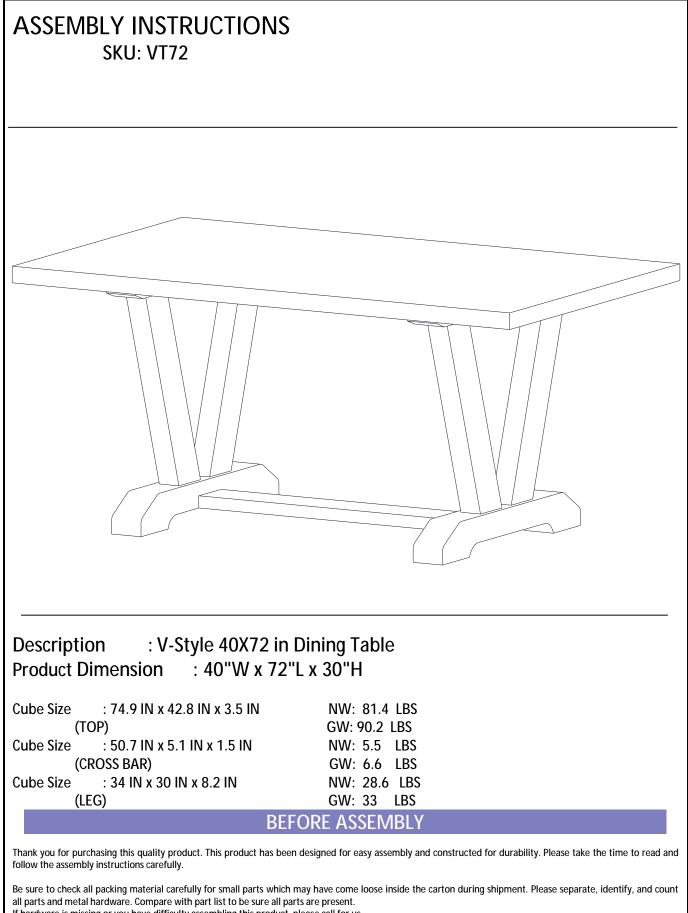

If hardware is missing or you have difficulty assembling this product, please call for us.


#### IMPORTANT NOTE:

V-Sty	le 40X	(72 in	Dining	Table
-------	--------	--------	--------	-------

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

### PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

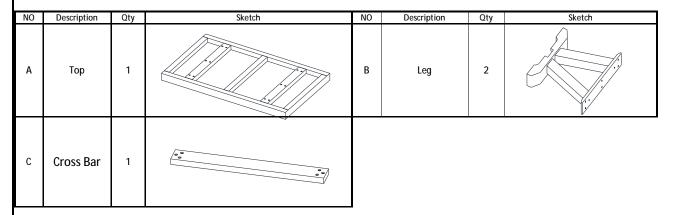

#### HARDWARE LIST


When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Bolt (M6x50)	18		2	Lock washer ( F 6.5xF 9mm)	18	$\bigcirc$
3	Flat Washer ( F 6.5xF 19mm)	18	$\bigcirc$	4	Allen key (M4mm)	1	

#### **STEP 1**

Attach legs (B) to the Cross bar (C) with Bolts (1) and washers (2), (3). Tighten with the Allen Key (4).

Note: DO NOT tighten any of the bolts, until the table is assembled

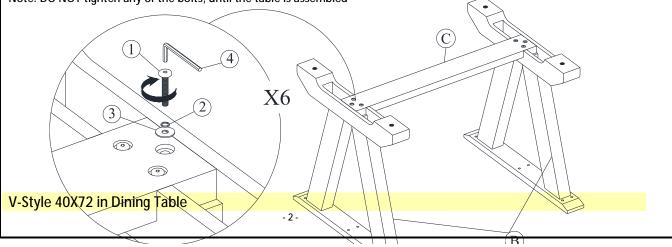

## STEP 2

Attach legs (on step 1) to the Top (A) with Bolts (1) and washers (2), (3). Tighten with the Allen Key (4). Note: Tighten the all bolts on step 1.

