
ASSEMBLY INSTRUCTIONS

SKU: NEH-Q



175 Southbelt Industrial Dr, Houston, TX 77047 Email: info@eastwestfurniture.net

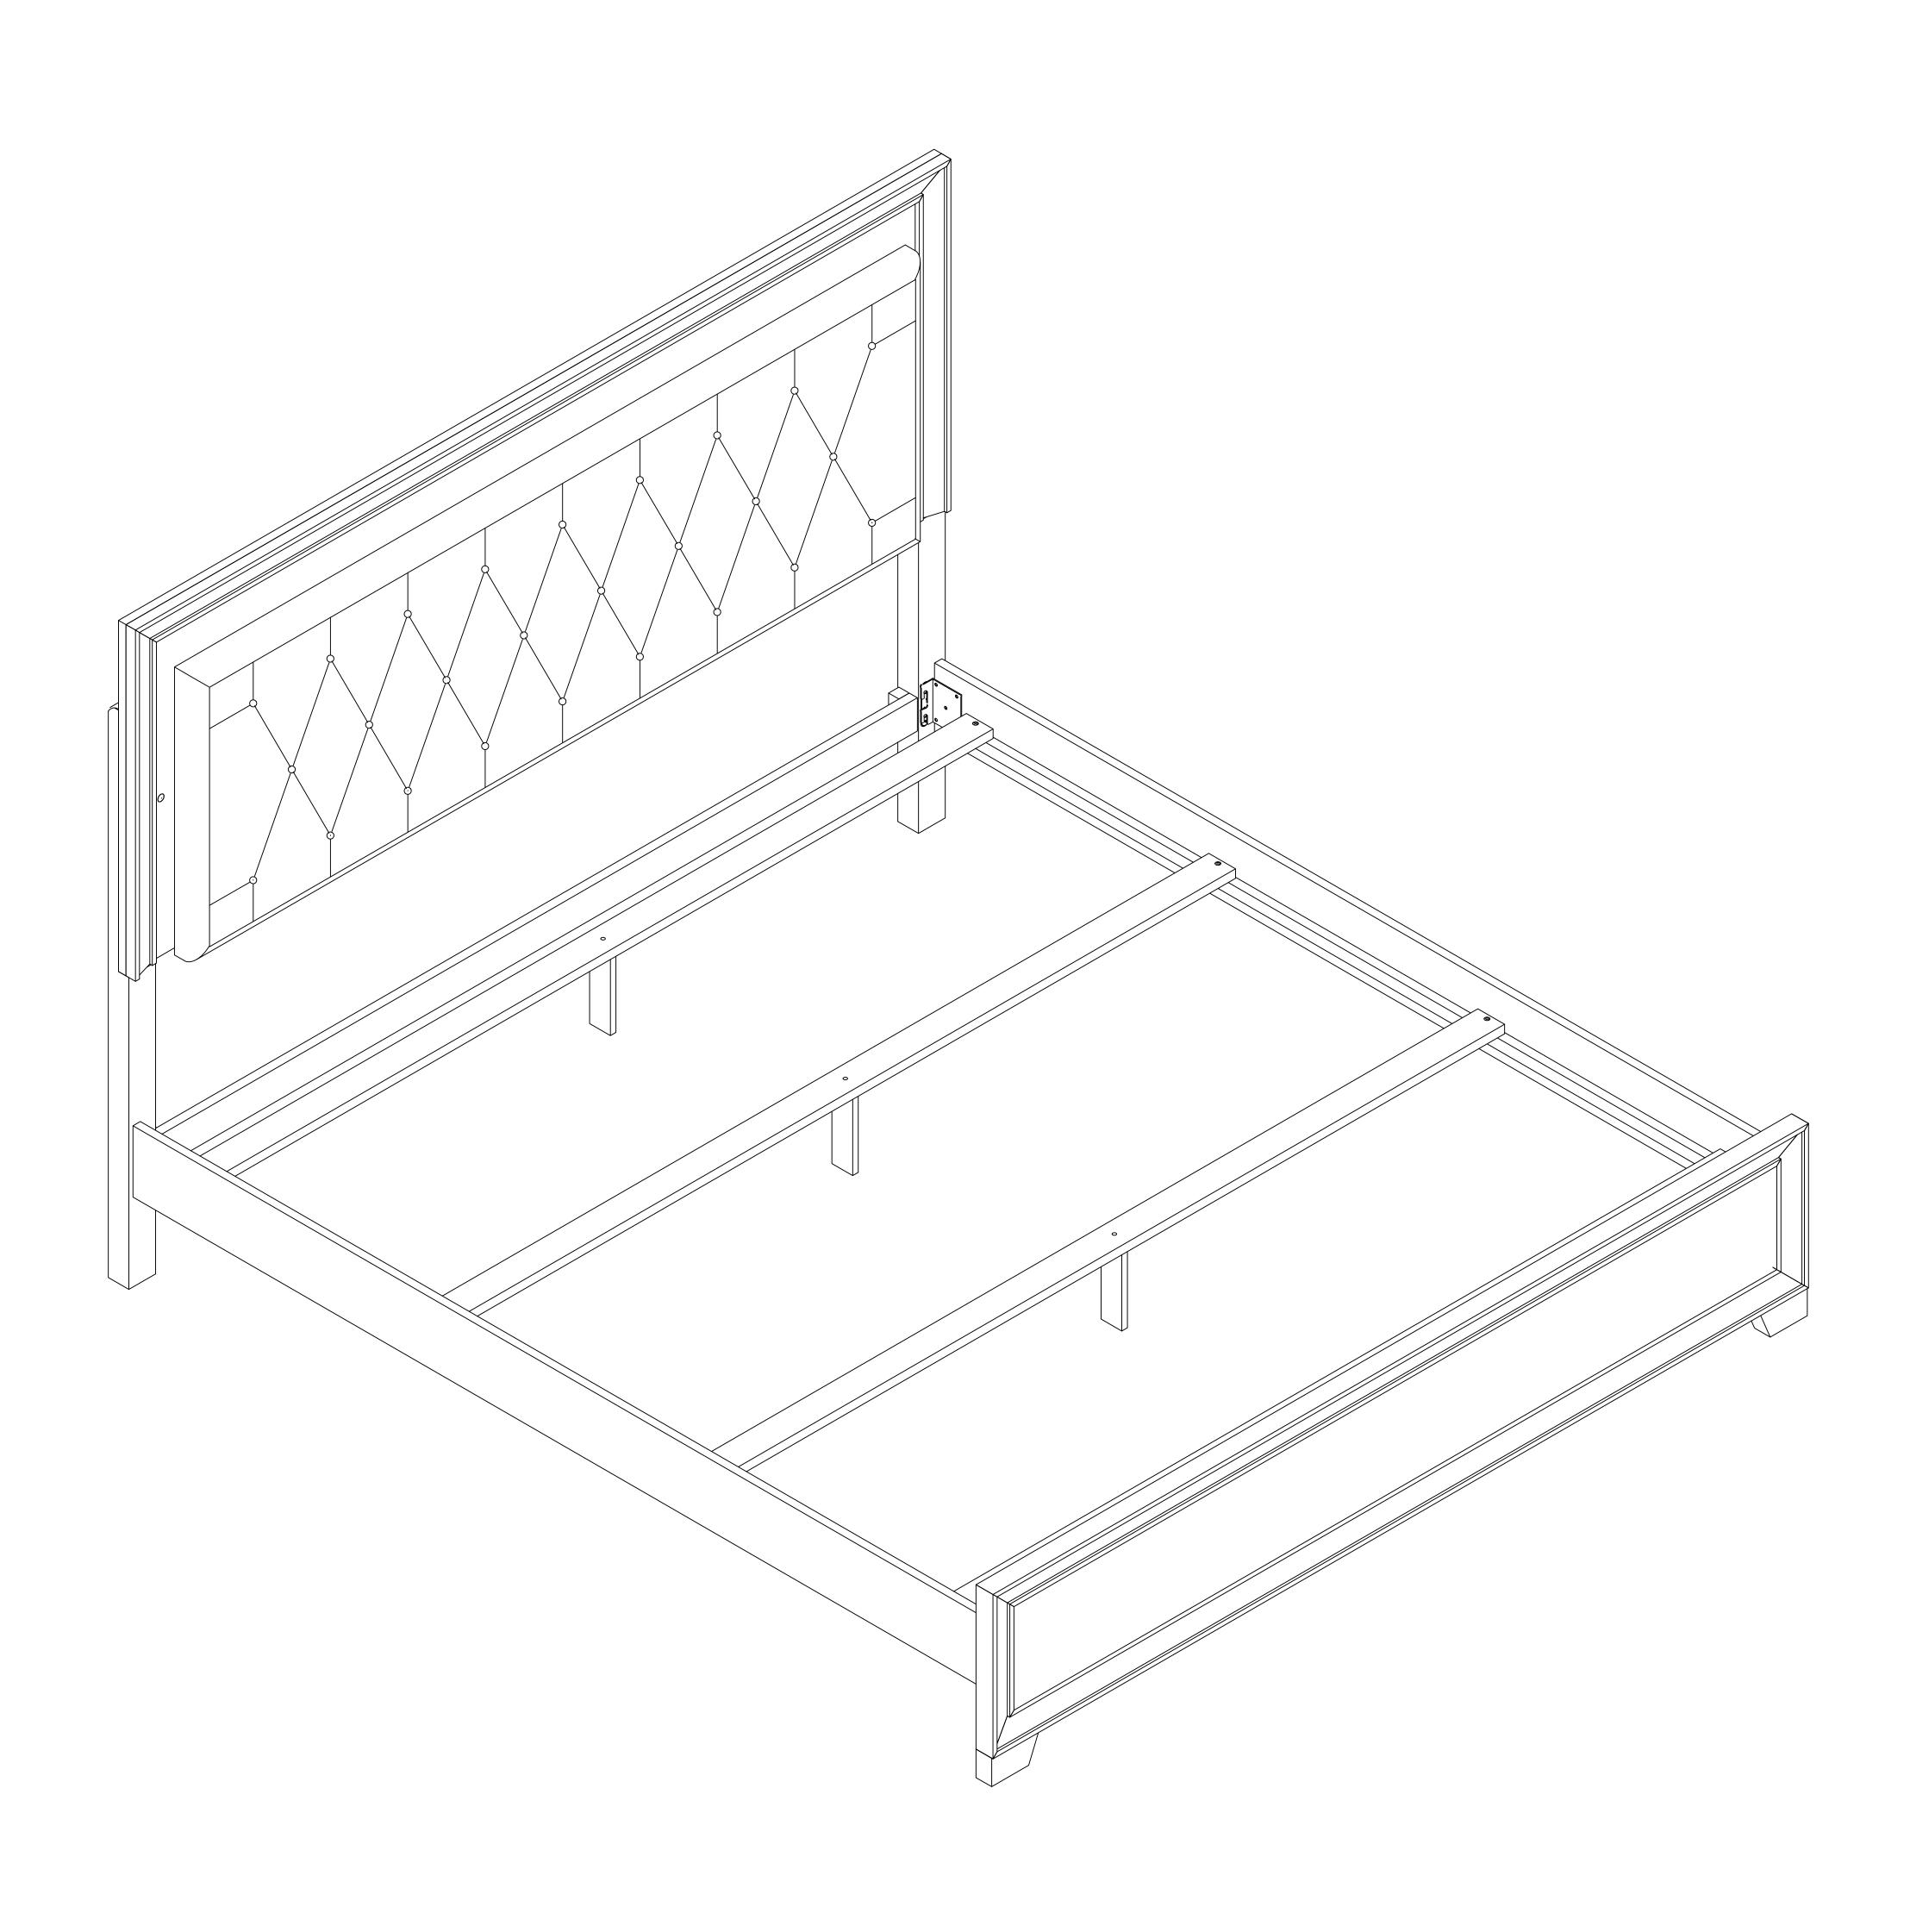

Description: Nella Queen Bed

Dimension: 2152 x 1602 x 1395 Hmm

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.

If hardware is missing or you have difficulty assembling this product, please call for us.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.


PART LIST |Q'Ty| Q'Ty Description NO Description NO Sketch Sketch BOX A : A+B+C+DHeadboard panel B A Support bar Left headboard leg Right headboard leg BOX B: E Footboard E BOX C : F+G+HSide rails Slats Center support legs

HARDWARE LIST

NO	Description	Q'Ty	Sketch	NO	Description	Q'Ty	Sketch
1	Allen Head bolts 1/4" x 45mm	8		2	Lock Washer Ø1/4"	8	
3	Flat Washer Ø1/4"	8		4	Allen key	1	
5	Allen Head bolts 5/16" x 20mm	8		6	Flat Washer Ø5/16"	8	
7	Lock Washer Ø5/16"	8		8	Wood Dowels Ø8 x 30mm	4	
9	Screws Ø8 x 30mm	8		10	Hex-Head bolts Ø1/4" x 65mm	4	
11	Horizontal-Hole bolts Ø1/4" x 12mm	4					


STEP 1: Assemble headboard

Assemble horizontal support bar (B) with legs (C&D) by Bolt (1), Lock washer (2), flat washer (3) and dowels (8). Do not tighten bolts.

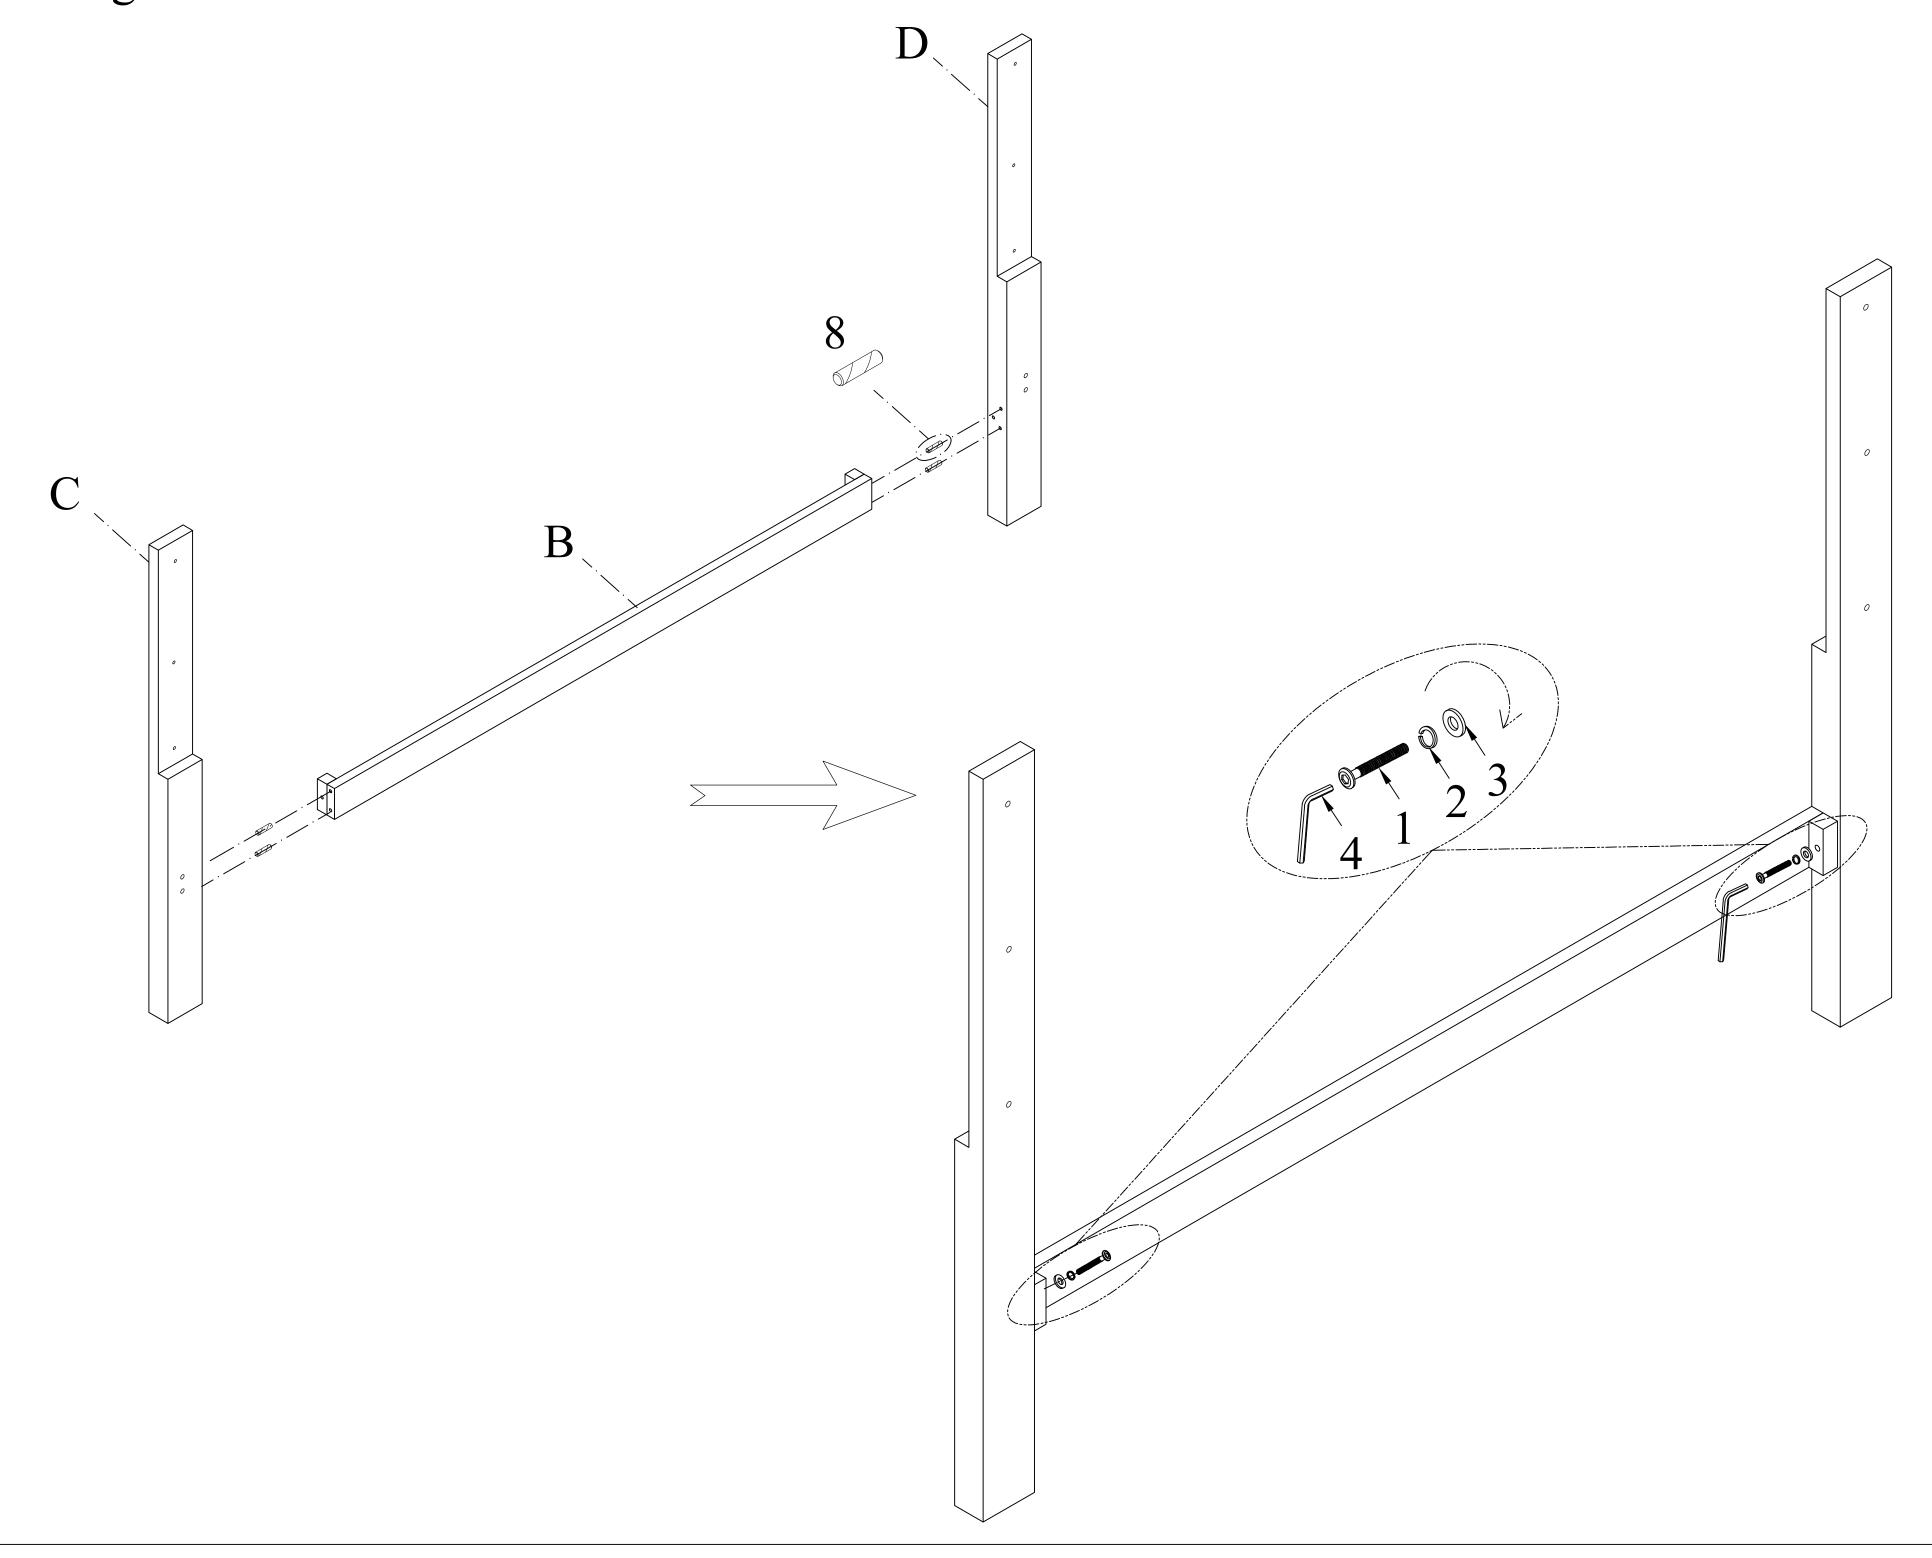


STEP 2: Assemble Headboard

Attach leg frame with headboard (A) by Bolt (1), Lock washer (2), flat washer (3). Tighten bolts.

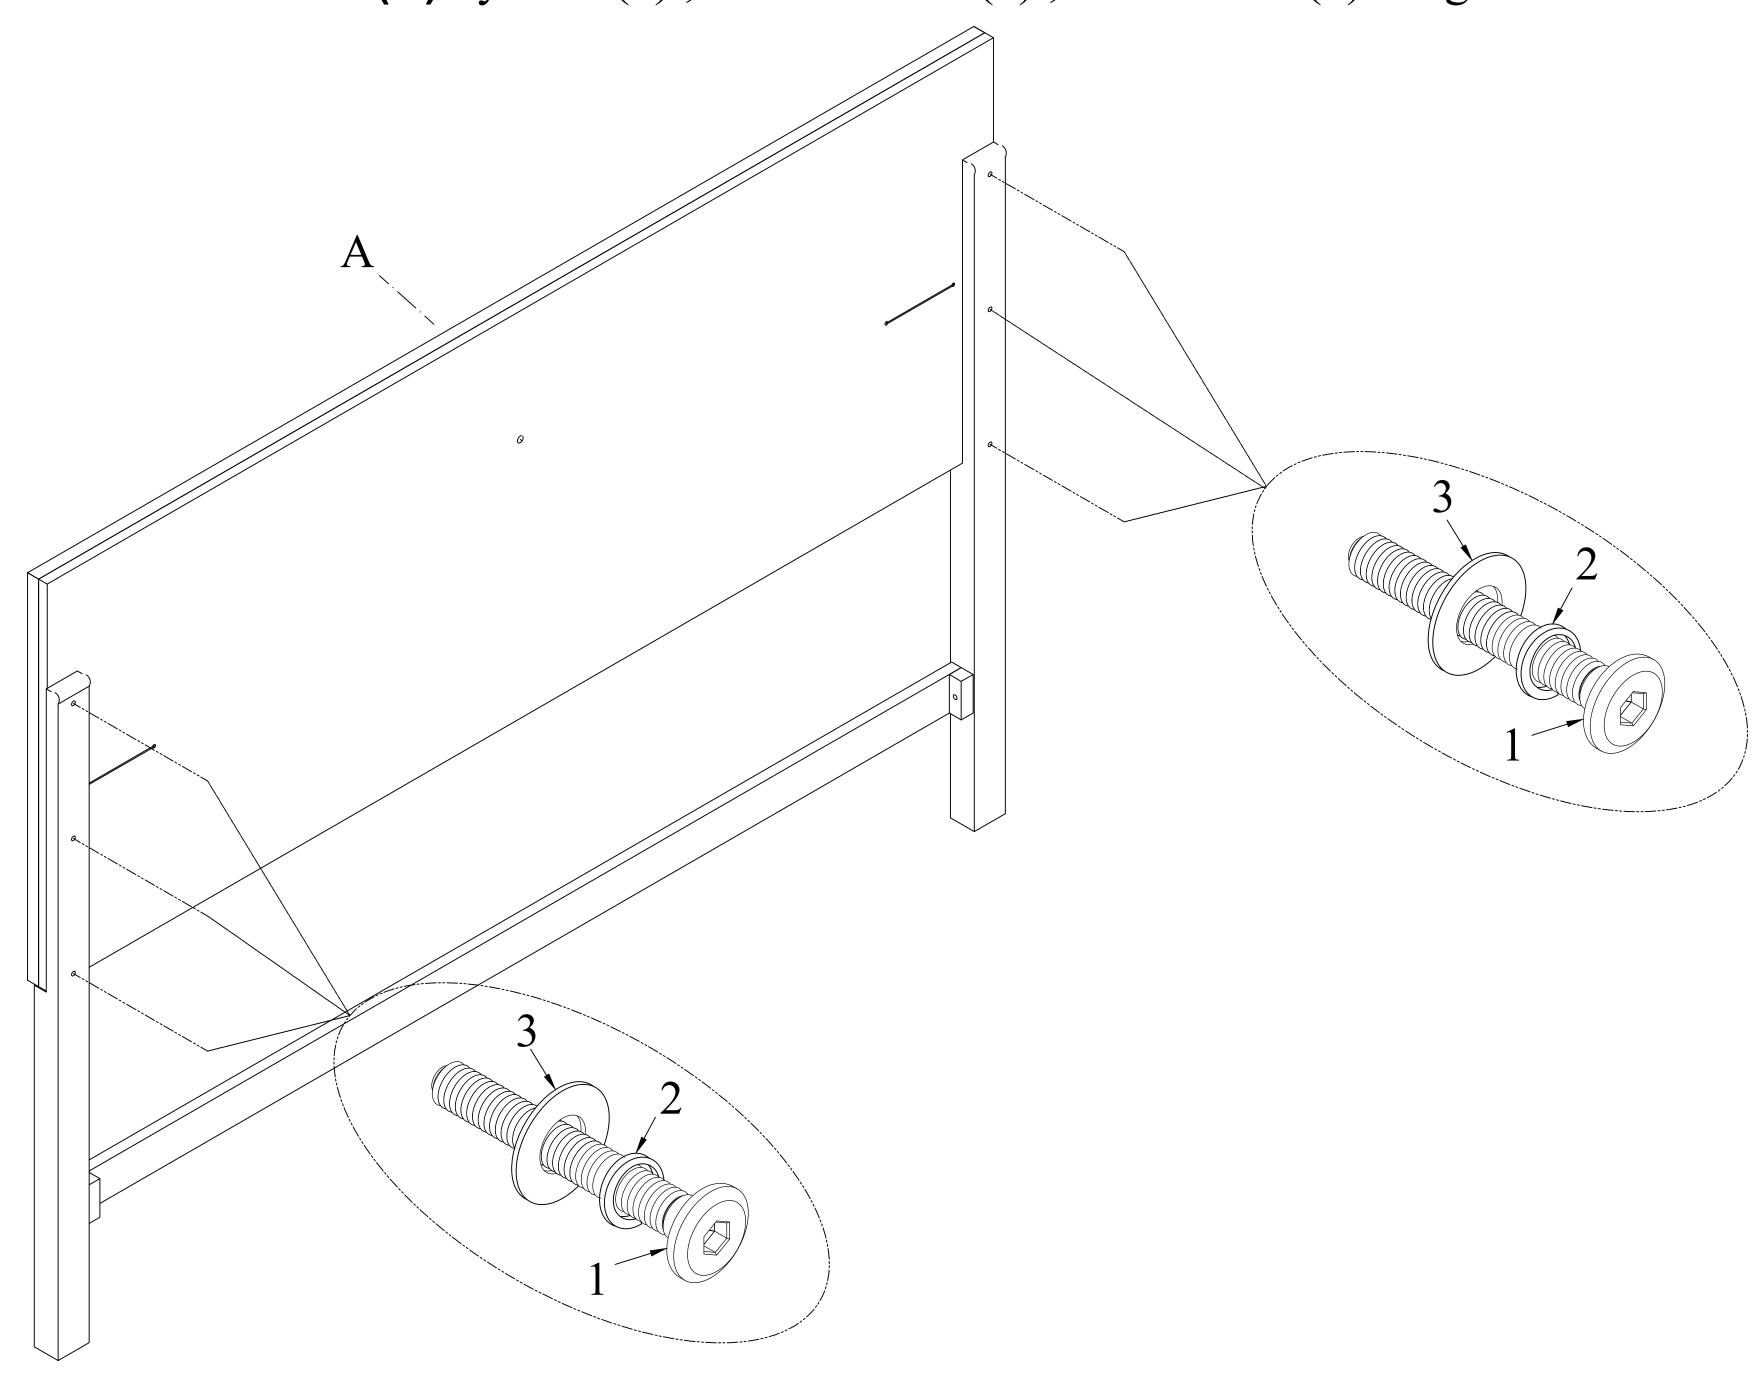


STEP 3: Assemble side rails

Assemble side rails (F) with headboard frame (A) & footboard (E) by Bolt (5), Lock washer (7), flat washer (6). Tighten bolts.

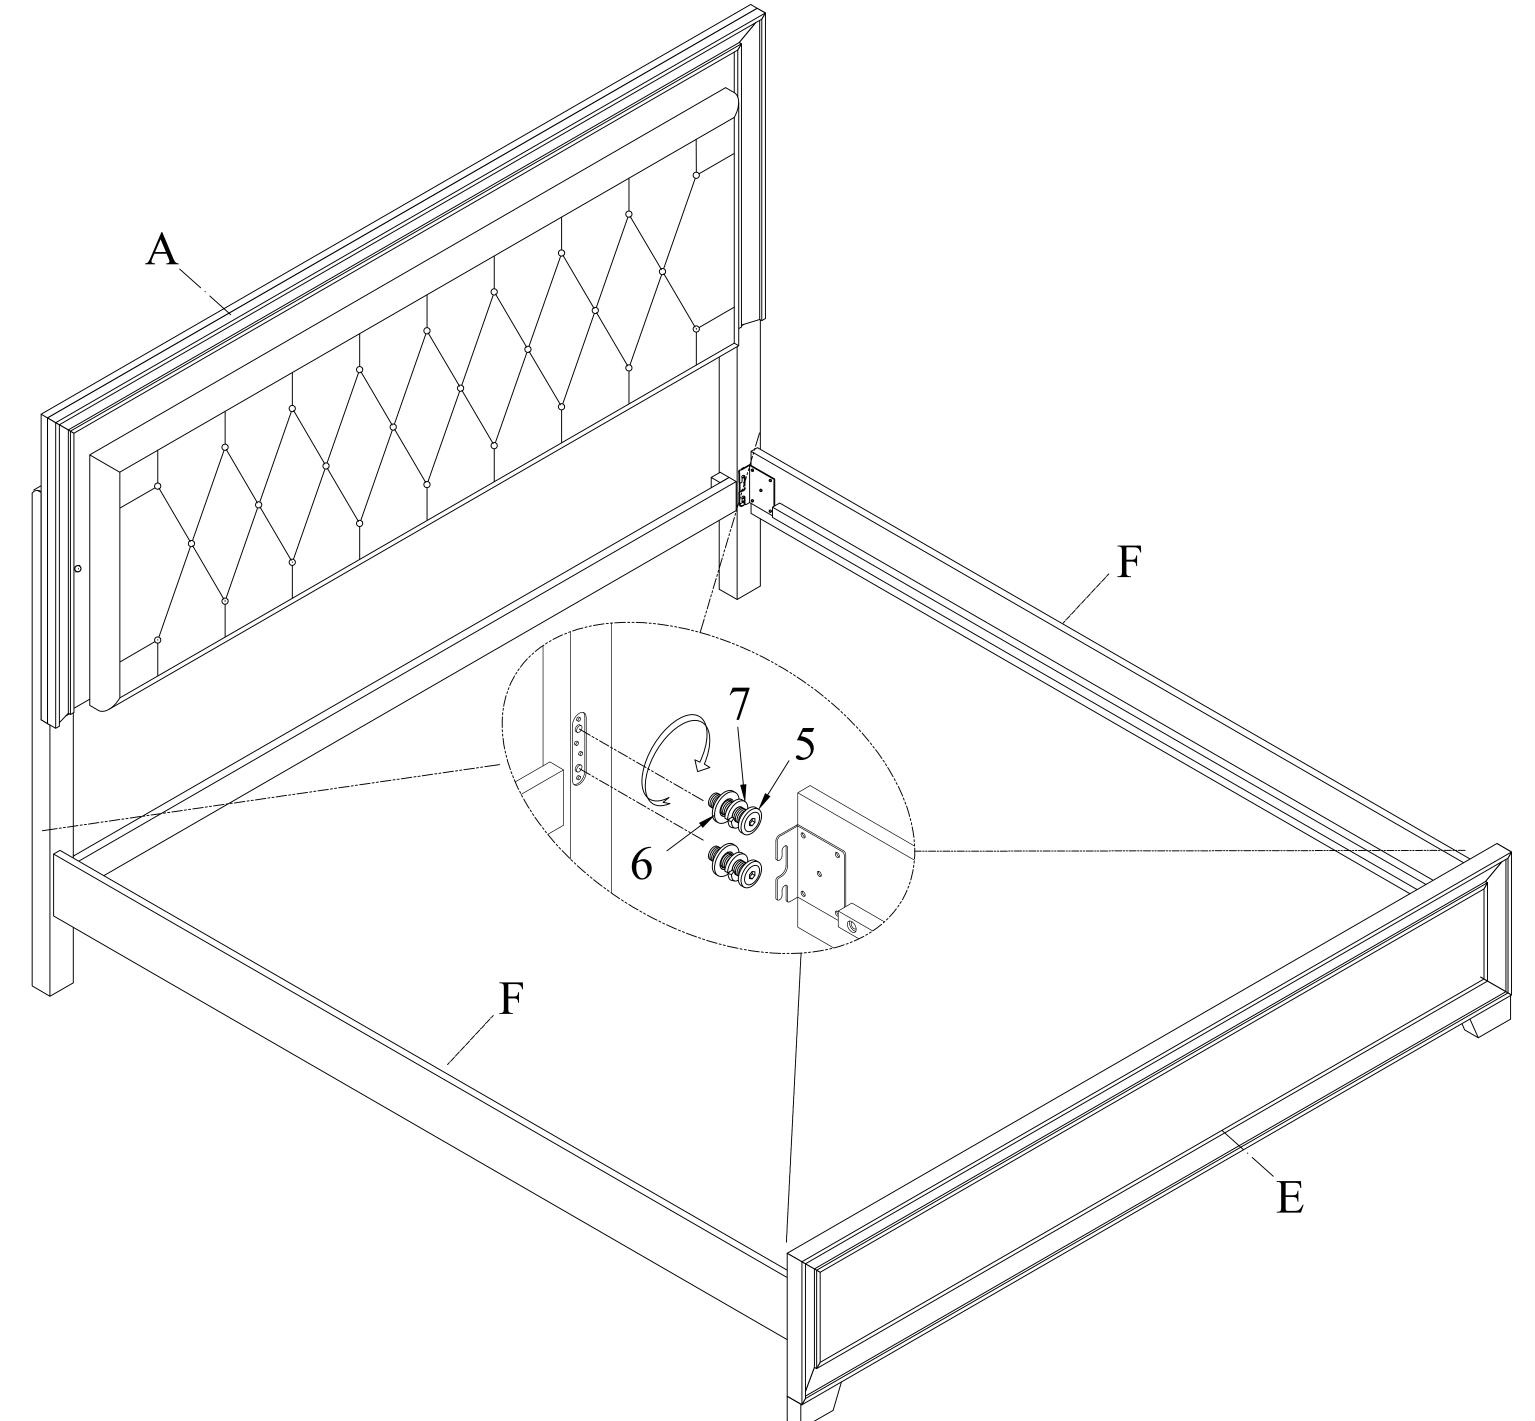

STEP 4: Assemble support legs

Use allen key (4) to assemble support legs (H) with Slats (G) by bolts (10) and nuts (11)

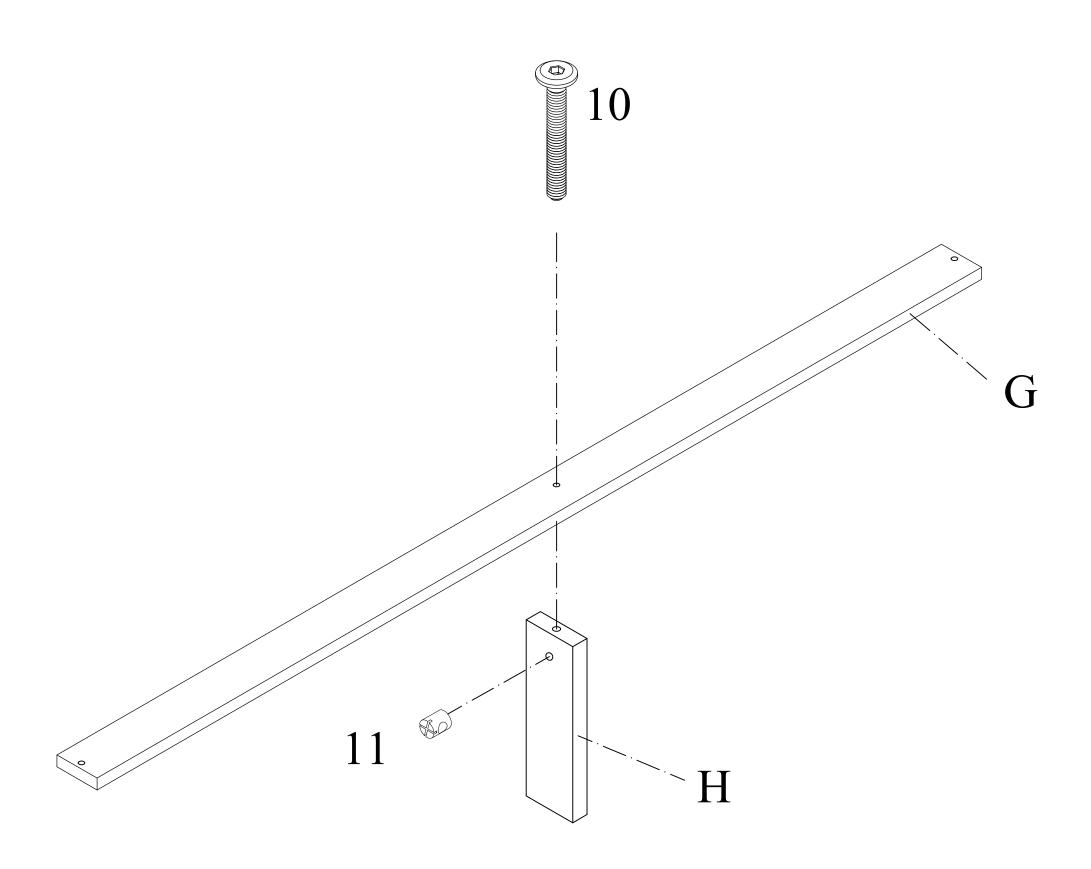

STEP 5: Attach slats

Attach the slats (G) to side rails with the screws (9) and a screw driver

