



# ASSEMBLY INSTRUCTION VIDEO

SKU: VEB-05-TA

VIEW ON SMARTPHONE



1. Open Camera app



2. Position camera to the QR code



3. Click on the pop-up link


VIEW ON COMPUTER



# ASSEMBLY INSTRUCTIONS

SKU : VEB

  
**EAST WEST**  
FURNITURE, LLC  
175 Southbelt Industrial Dr,  
Houston, TX 77047  
Email : [info@eastwestfurniture.net](mailto:info@eastwestfurniture.net)

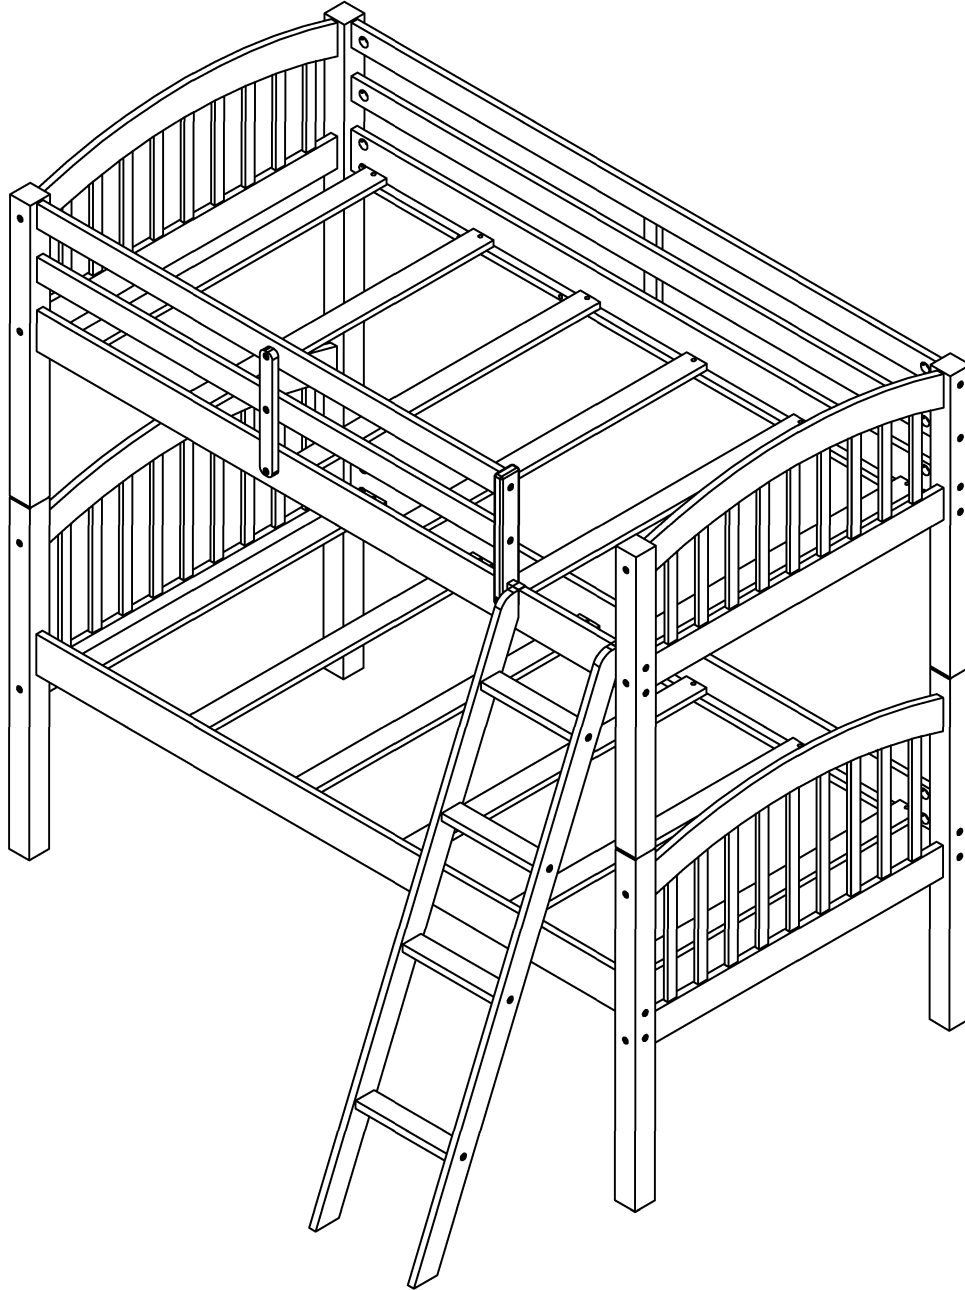

Description : Verona Twin Bunk Bed  
Dimension : 2060 x 1590 x 1587 Hmm

Verona Twin Bunk Bed

## BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.














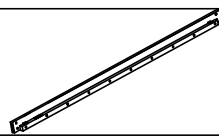

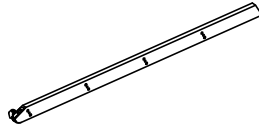

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.

If hardware is missing or you have difficulty assembling this product, please call for us.

### IMPORTANT NOTE:






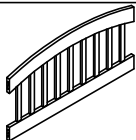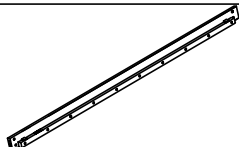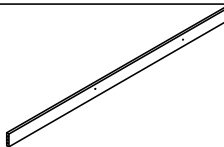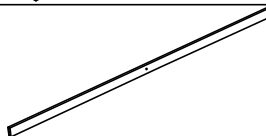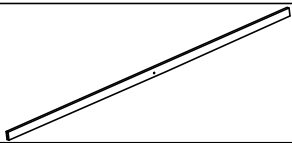






- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

## PART LIST

NO	Description	Q'Ty	Sketch	NO	Description	Q'Ty	Sketch
BOX A : A +B+C+D+ M+N							
A	Upper left post	2		B	Upper right post	1	
C	Upper right post	1		M	Lower right post	2	
D	Head/foot board	4		N	Lower left post	2	
BOX B : E+F+G+H+J+K+L+P+R+S+T							
E	Upper back side rail	1		F	Upper front side rail	1	
G	Slats	12		H	Front guard rail	2	
J	Back guard rail	2		K	Guard rail support	2	
L	Head Guard rail bar	1		P	Lower side rail	2	
R	Ladder rungs	4		S	Left ladder	1	
T	Right ladder	1					



Verona Twin Bunk Bed

## HARDWARE LIST

NO	Description	Q'Ty	Sketch	NO	Description	Q'Ty	Sketch
1	Head hex bolts 1/4" x 100mm	22		2	Head hex screws M7 x 30mm	8	
3	Head hex screws M7 x 50mm	8		4	Head hex bolts 1/4" x 65mm	2	
5	Wood dowels ø8 x 30mm	64		6	Dowel nuts 1/4"xø10x12mm	24	
7	Wood dowels ø15 x L90mm	4		8	Wood screws M4 x 35mm	24	
9	Wood screws M4 x 15mm	2		10	Allenkey 4mm	1	
11	Head hex bolts 1/4" x 85mm	16		12	Hooks bracket	2	

Upper Post x 4

Lower Post x 4

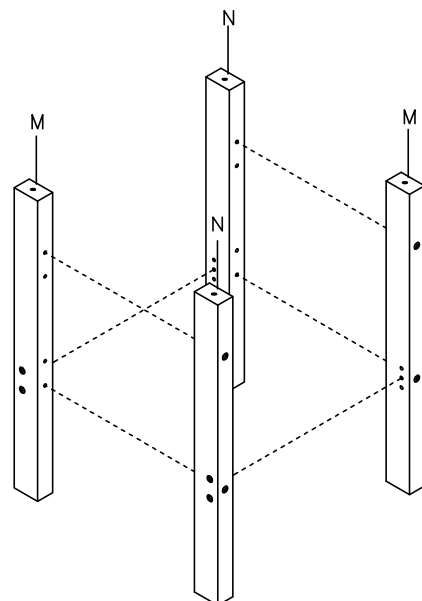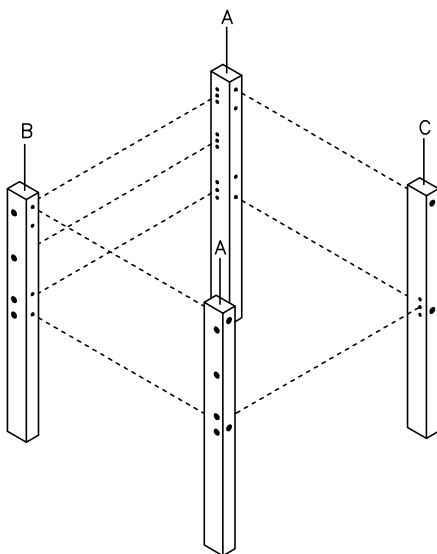

A – Left Front & Right Back Upper Post x 2  
 B – Left back Upper Post x 1  
 C – Right Front Upper Post x 1


M – Left Back & Right Front Lower Post x 2  
 N – Left Front & Right Back Lower Post x 2

**Verona Twin Bunk Bed**




## STEP 1 : Assembly head/foot assy

LOWER BUNK ASSEMBLY : Use alenkey (10) assembly head board & foot board (D) with lower post (M&N) by bolts (11).

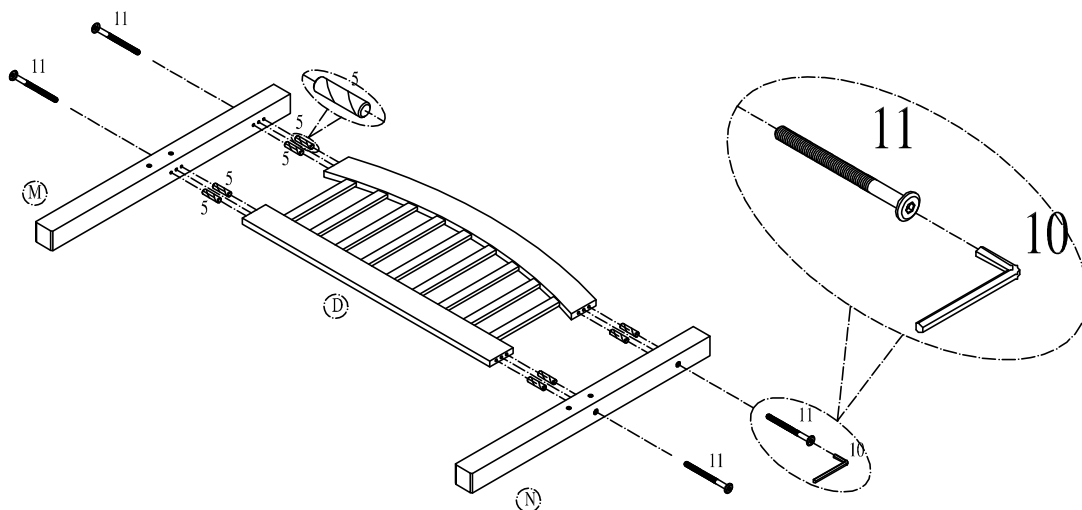


## STEP 2 : Lower bed assembly

LOWER BUNK ASSEMBLY : Use alenkey (10) assembly lower head board assy with lower side rails (P) by bolts (1) & nuts (6)

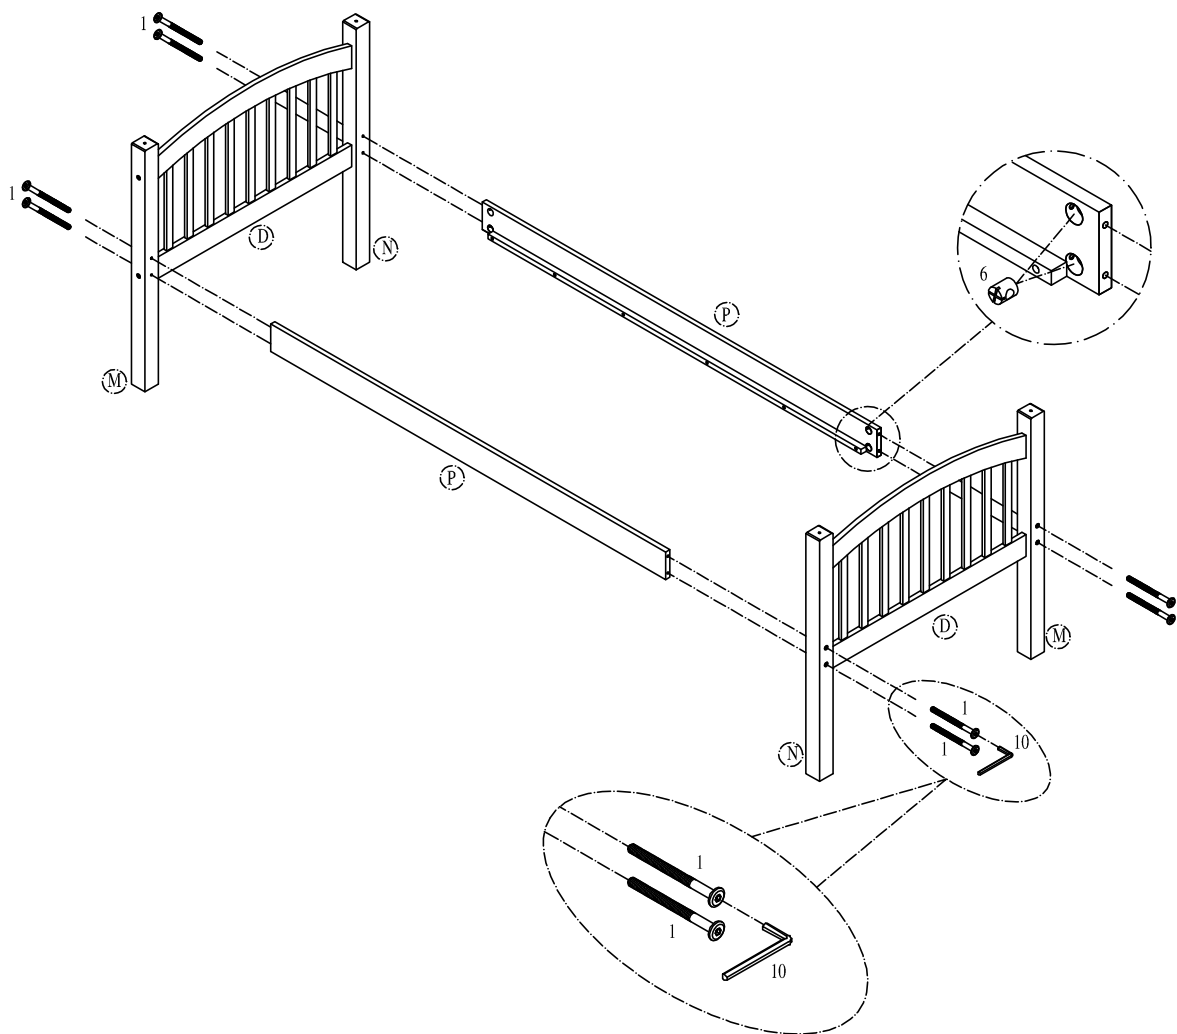


### STEP 3 : Fix slats

LOWER BUNK ASSEMBLY : Use screwdriver fix each slats (G) with lower side rails (P) by screws (8)

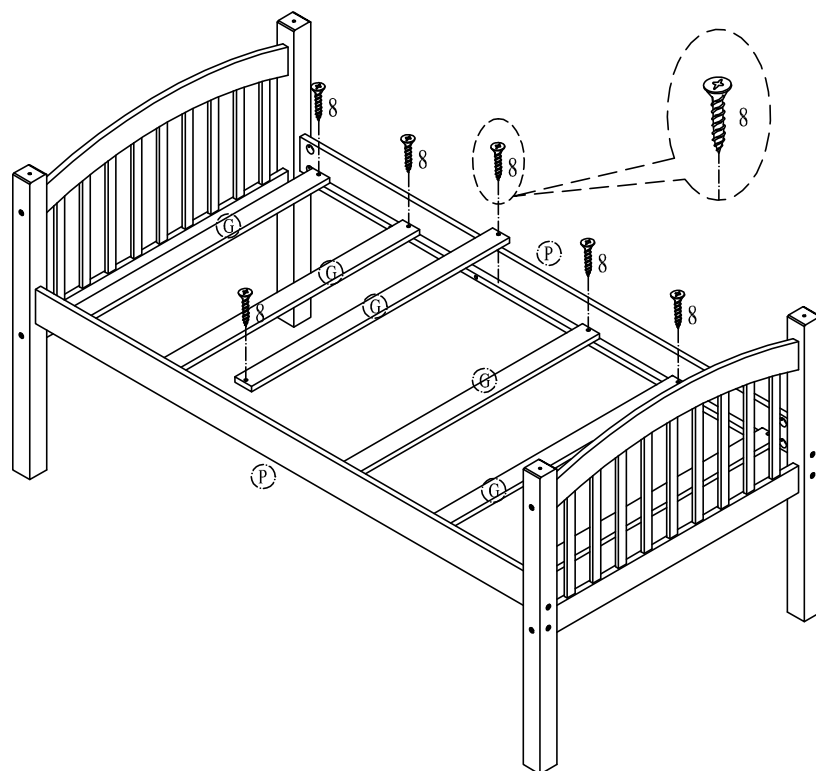


### STEP 4 : Assembly head/foot upper assy

UPPER BUNK ASSEMBLY : Use allenkey (10) assembly head board & foot board (D) with upper post (A,B&C) by bolts (11) .

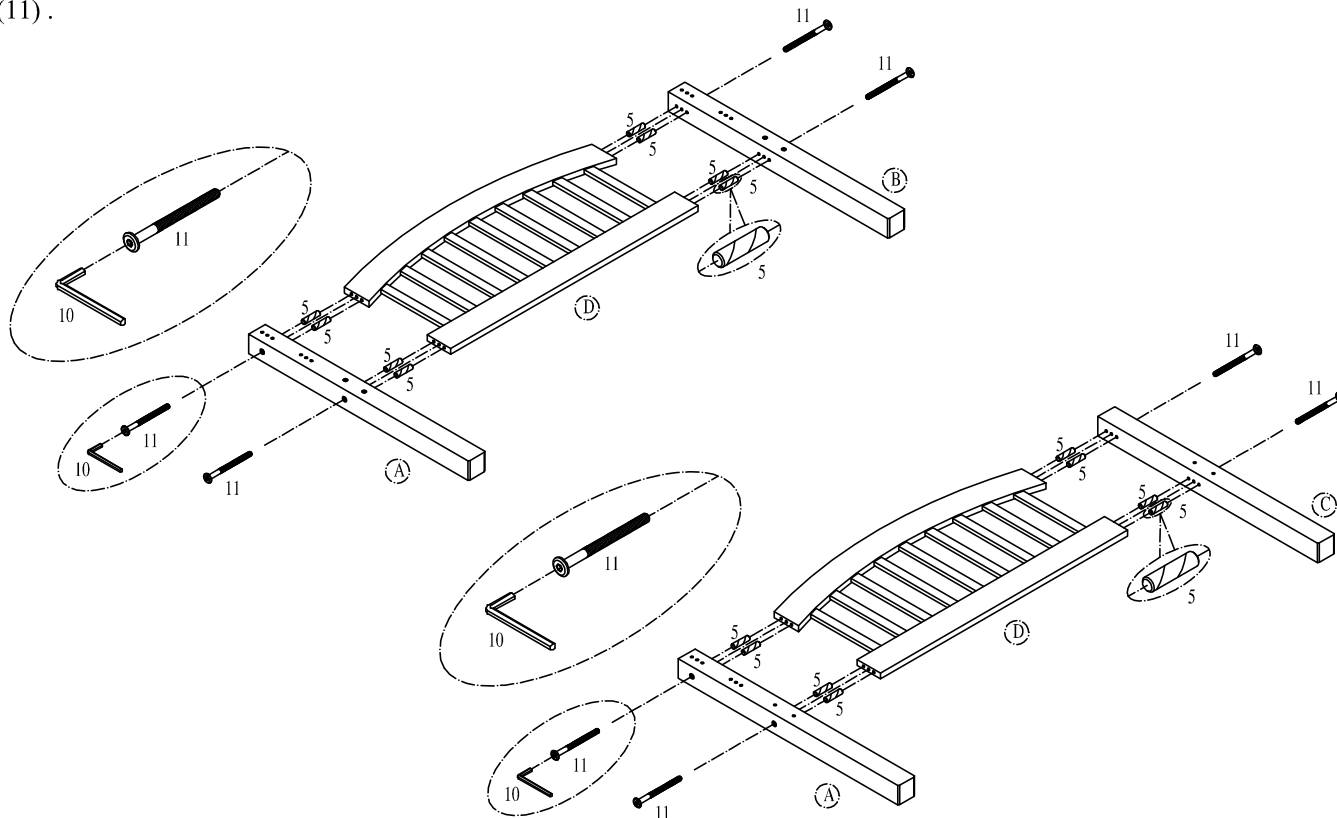

## STEP 5 : Upper bunk assembly


UPPER BUNK ASSEMBLY : Use allenkey (10) assembly upper head board assy with upper side rails (E&F) and guard rail (H&J) by bolts (1) & nuts (6). Next , fix guardrail support (K) on guard rails & side rails by wood screws (5). Assembly head guard rails bar (L) with guard rails (H) by head hex screw (2).

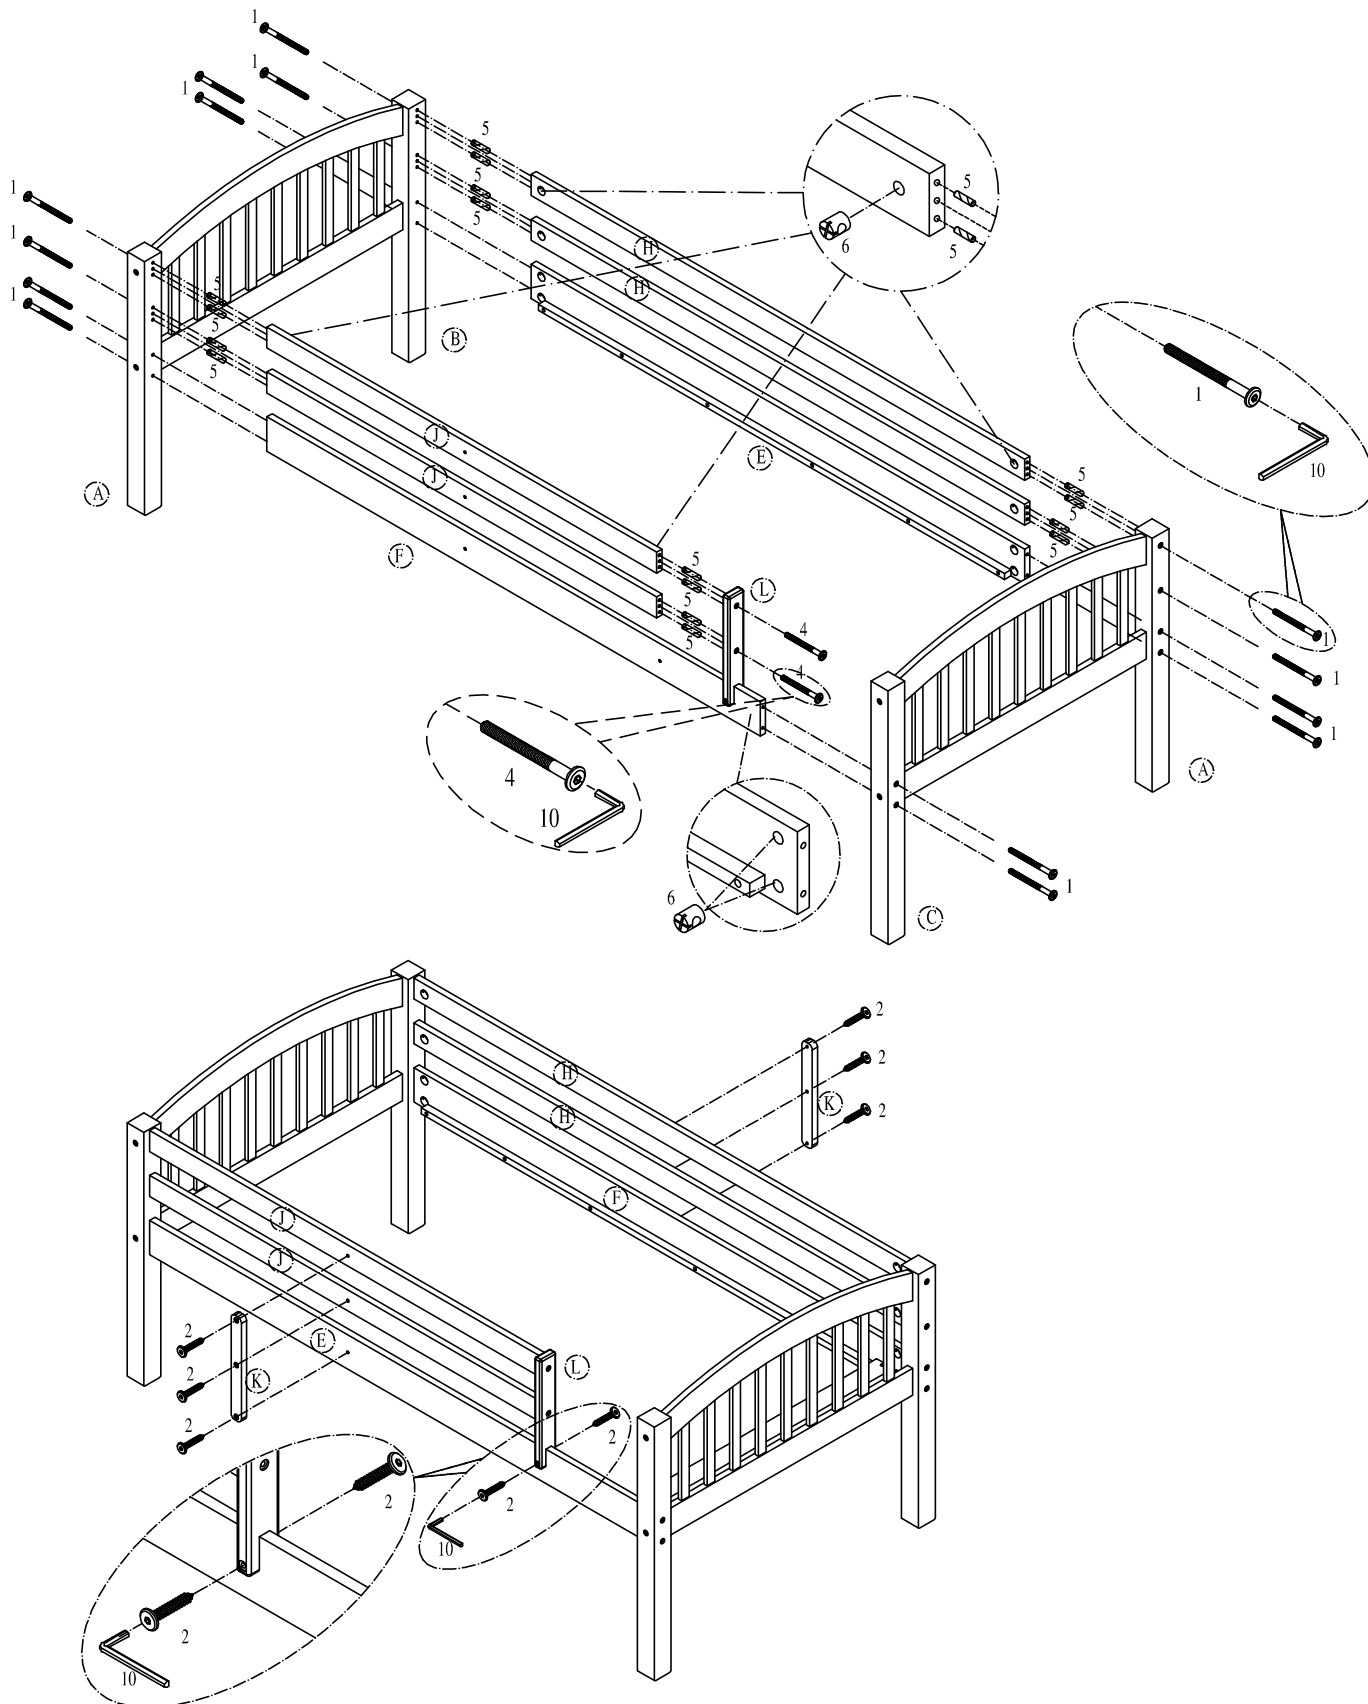

Verona Twin Bunk Bed


## STEP 6 : Fix slats

UPPER BUNK ASSEMBLY : Use screwdriver fix each slats (G) with lower side rails (P) by screws (8)

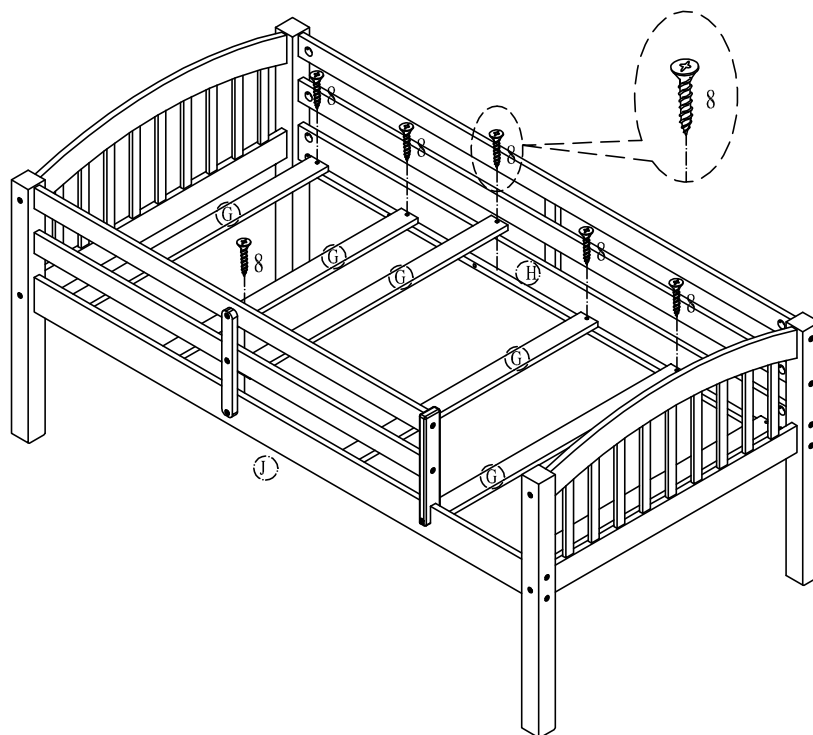

## STEP 7 : Bunk bed assembly


BUNK BED ASSEMBLY : Put upper bunk on lower bunk follow dowel (7)

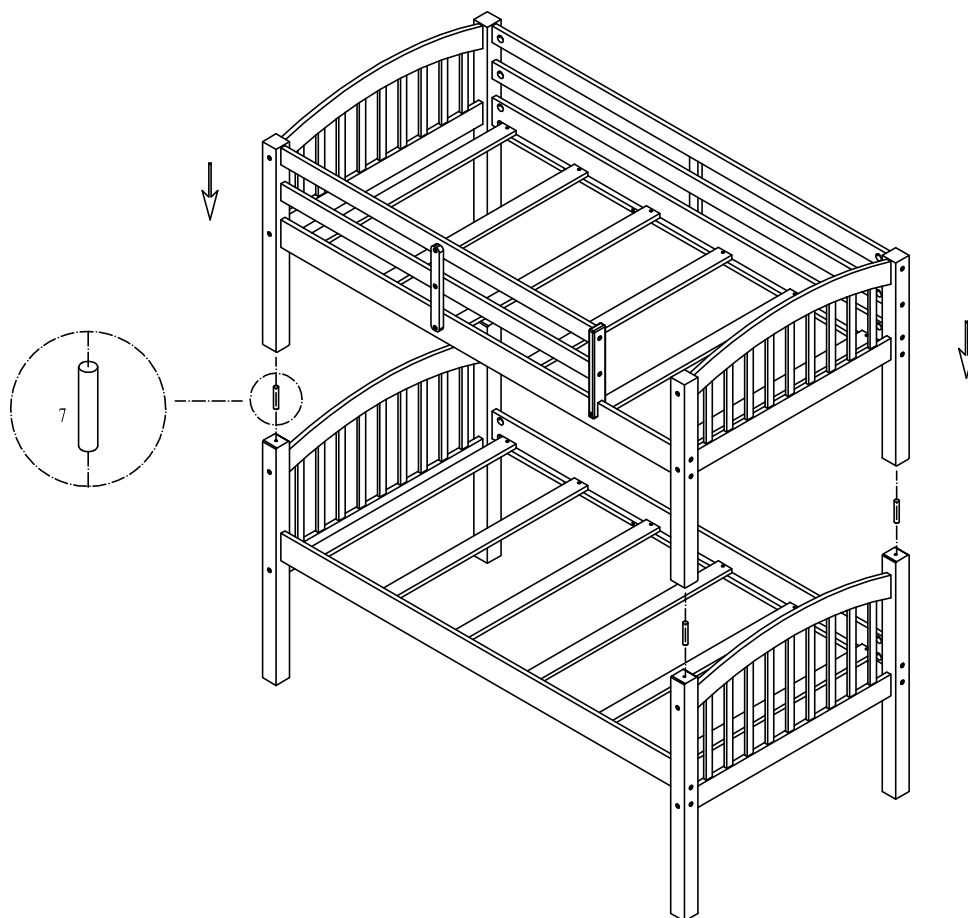

Verona Twin Bunk Bed


## STEP 8 : Ladder assembly

LADDER ASSEMBLY : Put 2 ladder (S&T) parallel and assembly ladder rungs (R) by screws (3) . Fix hooks bracket (12) by screws (9)

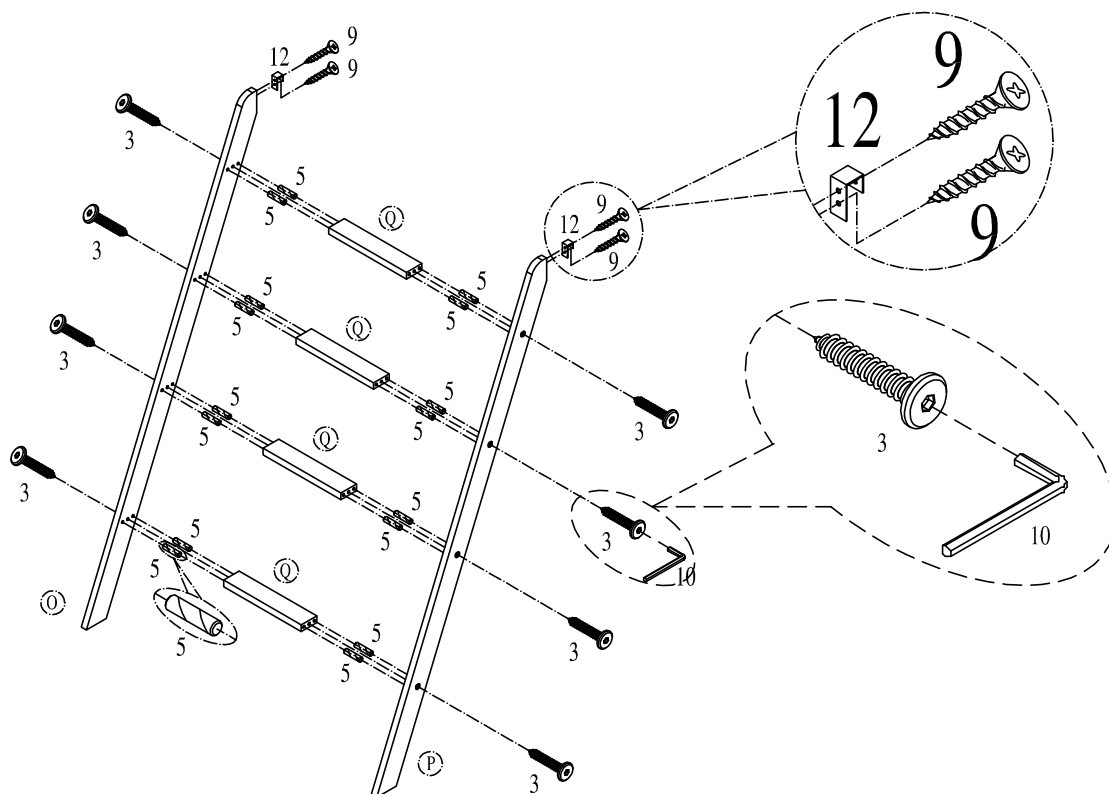

## STEP 9 : Ladder assembly

LADDER ASSEMBLY : Fix ladder on upper bunk by screws (9)


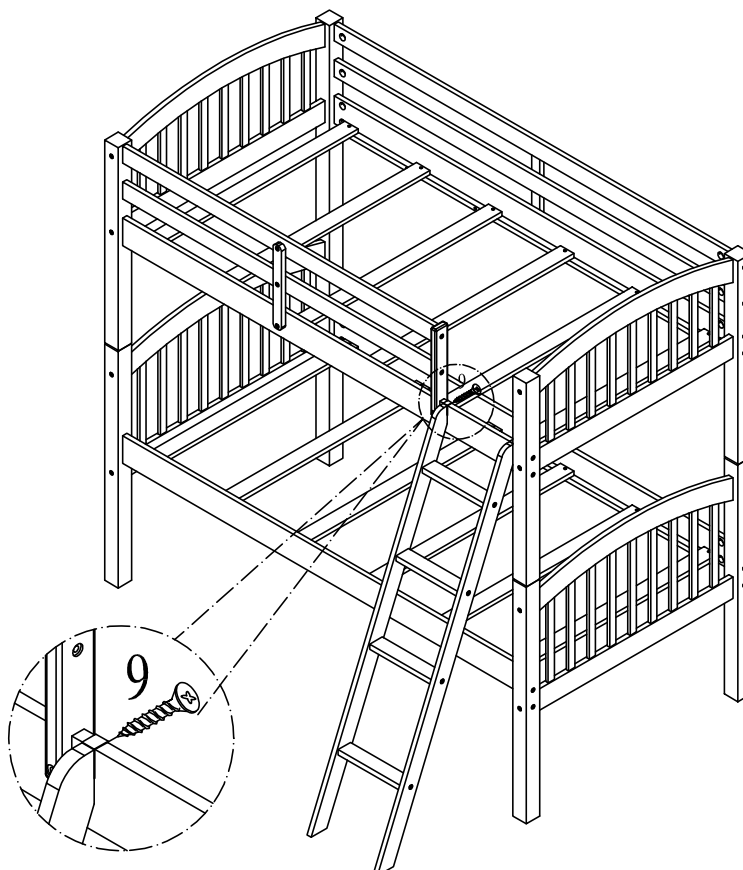


Verona Twin Bunk Bed

# ASSEMBLY INSTRUCTIONS

SKU : VEA

  
**EAST WEST**  
FURNITURE, LLC  
175 Southbelt Industrial Dr,  
Houston, TX 77047  
Email : [info@eastwestfurniture.net](mailto:info@eastwestfurniture.net)

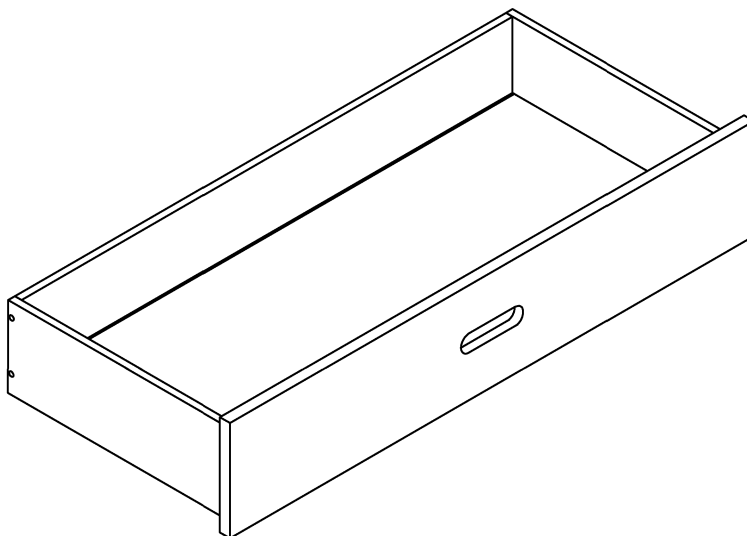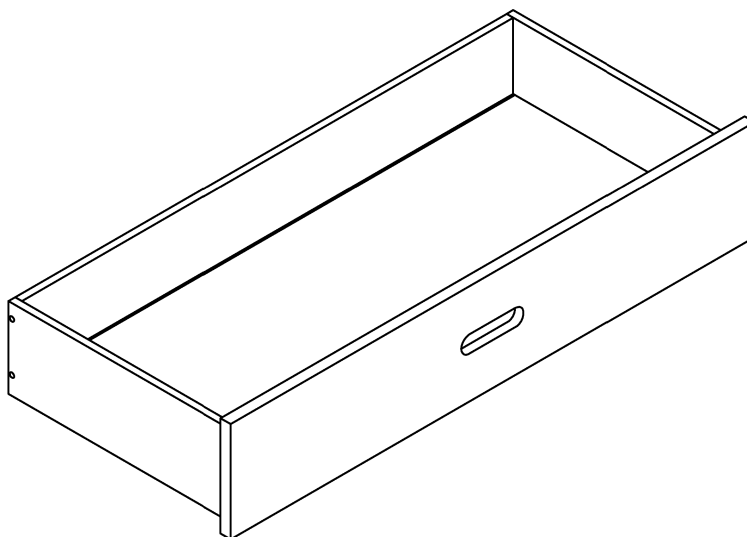

Description : Verona Under Drawer  
Dimension : 945 x 418 x 220 Hmm

Albury Bunk Bed Under Drawer

## BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.





Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.

If hardware is missing or you have difficulty assembling this product, please call for us.




### IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.
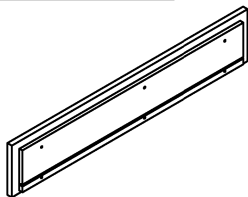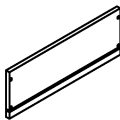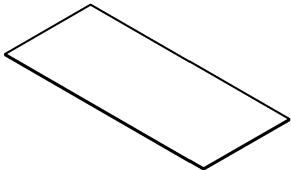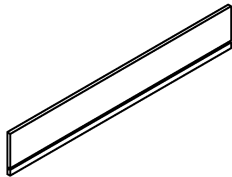
## PART LIST

NO	Description	Q'Ty	Sketch	NO	Description	Q'Ty	Sketch
A	Drawer front board	2		B	Drawer side board	4	
C	Drawer bottom board	2		D	Drawer back board	2	


## HARDWARE LIST

NO	Description	Q'Ty	Sketch	NO	Description	Q'Ty	Sketch
1	Wood screws M4 x 25mm	16		2	Wood screws M4 x 12mm	16	
3	Wheels	8					

**Verona Under Drawer**


### STEP 1 :

Assembly the drawer side (B) to the drawer front (A) with screws (1). Slide drawer bottom (C) into the grooves of drawer side (B) and drawer front (A).

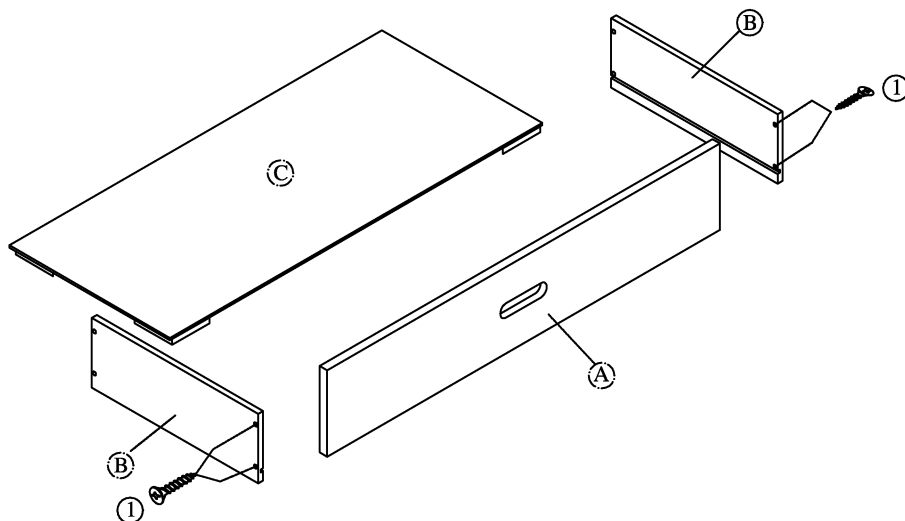

### STEP 2 :

Assembly the drawer back (D) into the drawer side (B) and drawer bottom (C) with screws (1) Make sure drawer bottom (C) is properly inserted into the groove of drawer back (D)

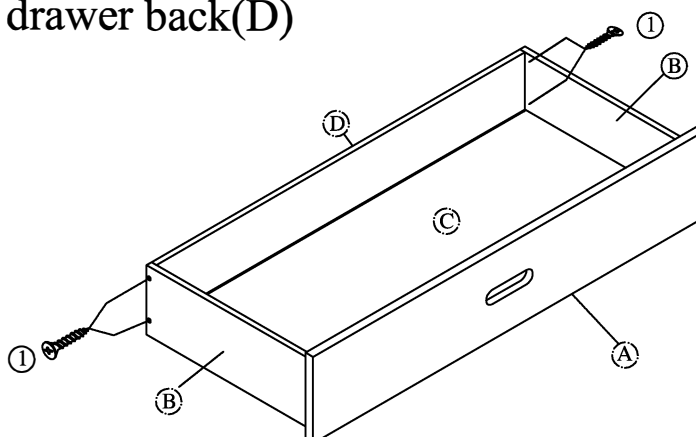

### STEP 3 :

Fix the Wheels (3) into the drawer side (C) with screws (2)

